




JUAL WHEN THE SUN DOESN'T SHINE



This installation instruction is
made available by JUAL A/S



INSTALLATION GUIDELINE

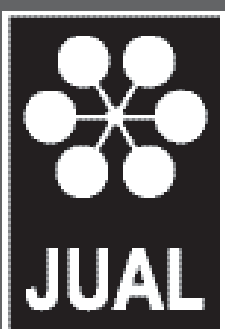


JUAL ROOF CONSOLE

(Cold roof - Wooden Rafter)


Symbol description




Drill Driver with a Ø6 mm wooden drill

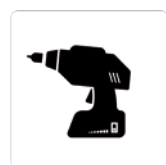

Drill Driver with a TX40 bit driver

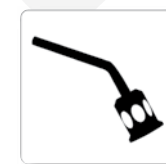

Gas torch

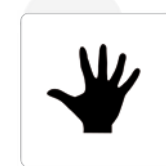

Manual handling



Pay attention!




**Loosening operation
(anti clock wise rotation)**




**Tightening operation
(clock wise rotation)**

JUAL Roof Console cold roof

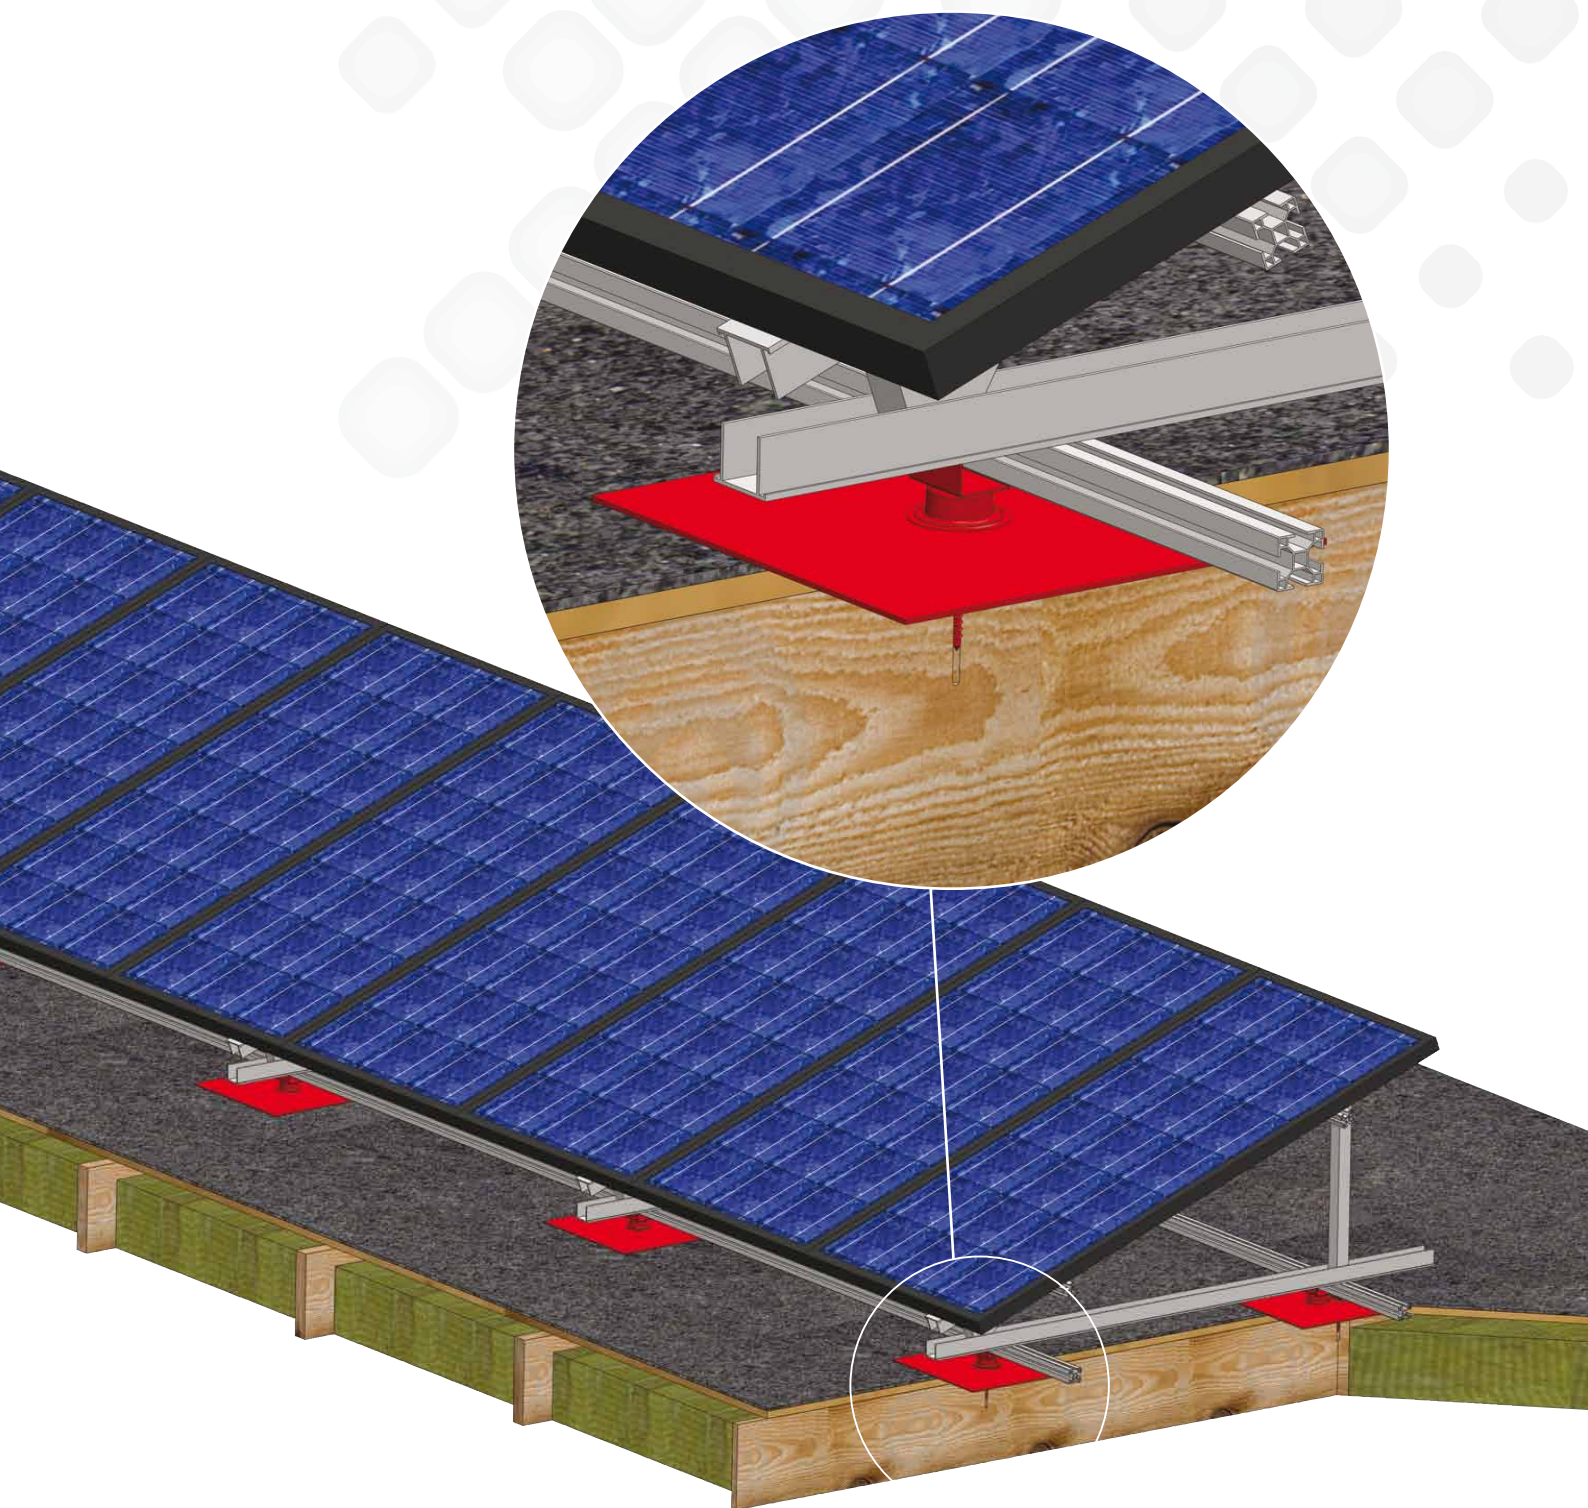




1. Rafter predrilling

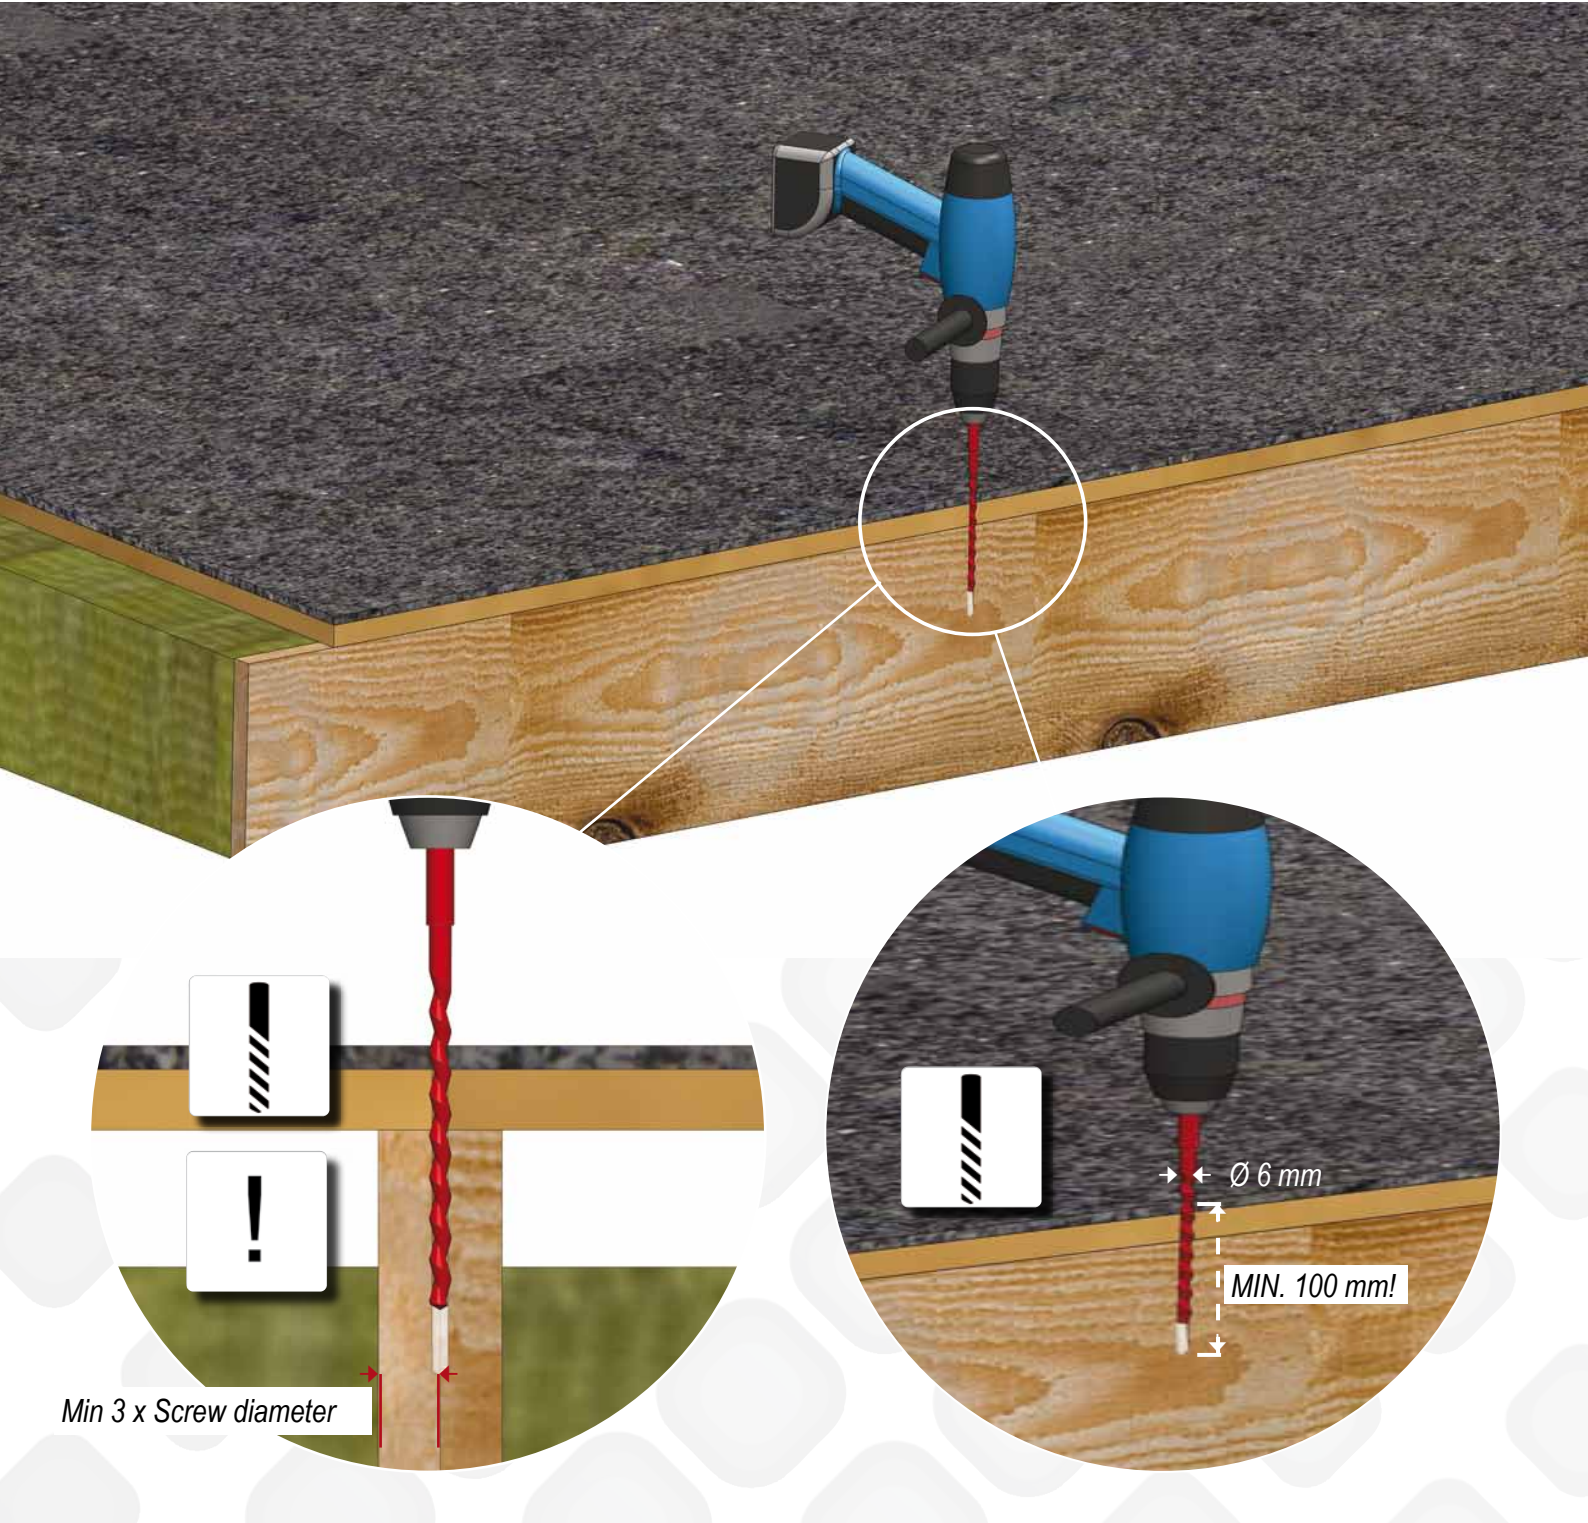

2. Fixation of the Console Adapter







Pay Attention
A standard wooden screw should be used to fix the Console Adapter against rotational movement during the installation.

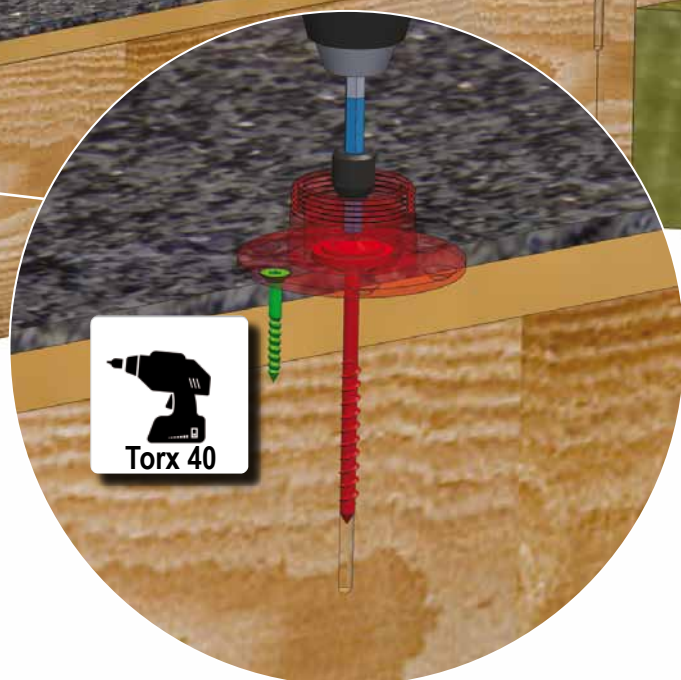
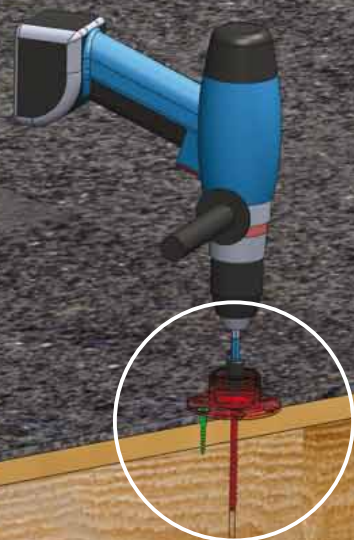
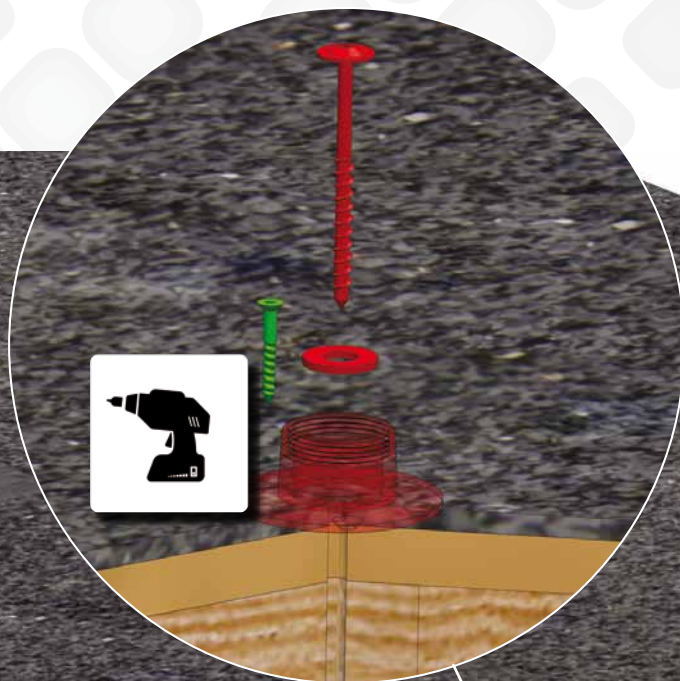


3.

Fixation of the Console with the Compression Ring

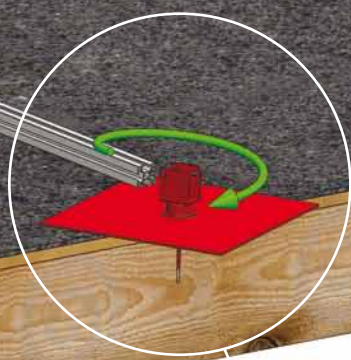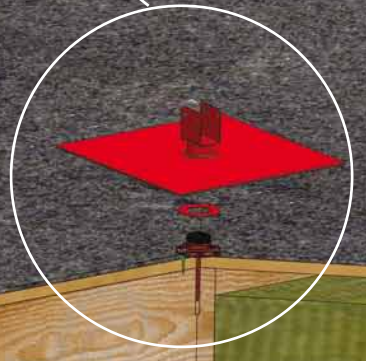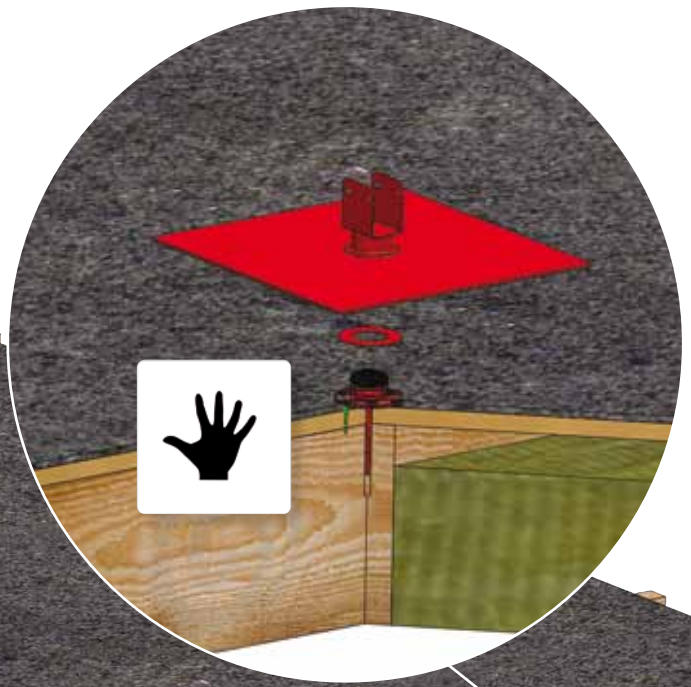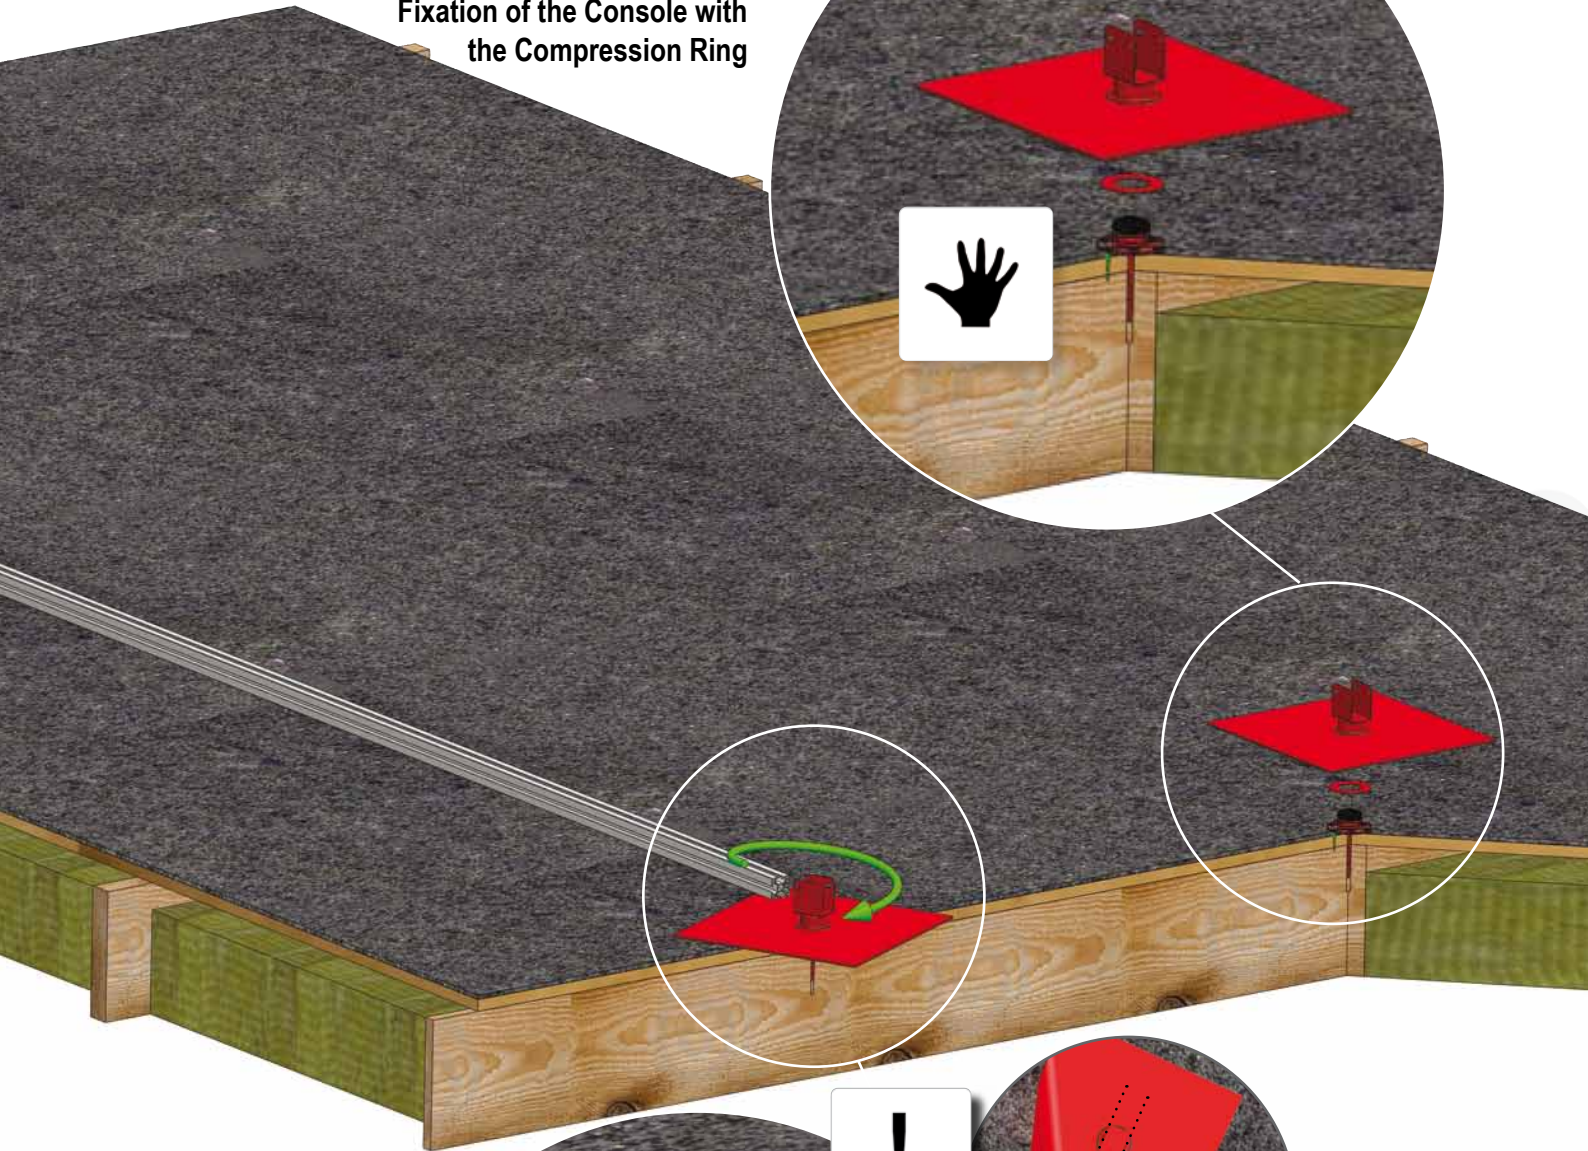

4. Roof Console Tightening

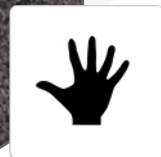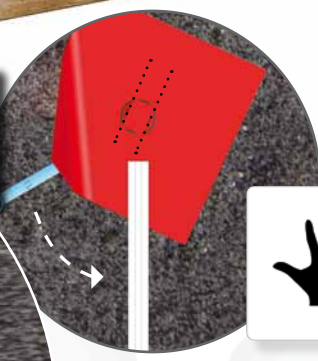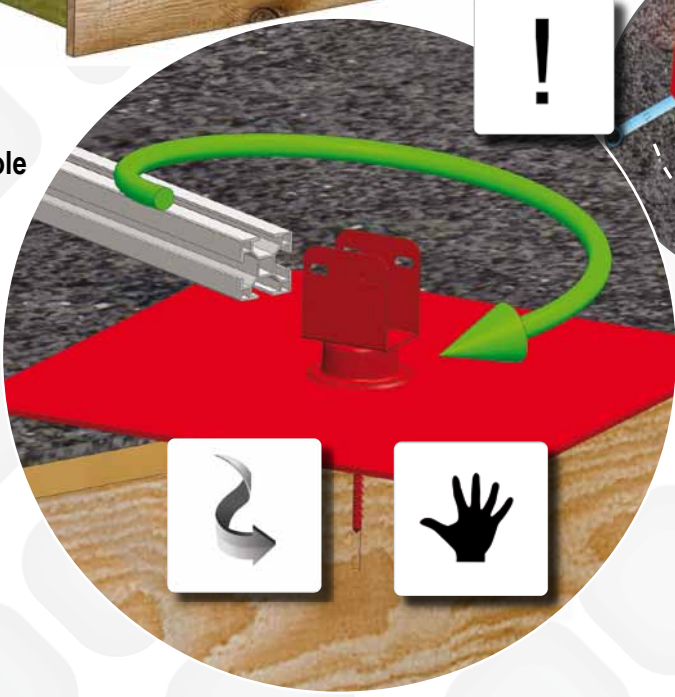


Pay Attention
The Connection Interface must be correctly aligned.





5. Torching

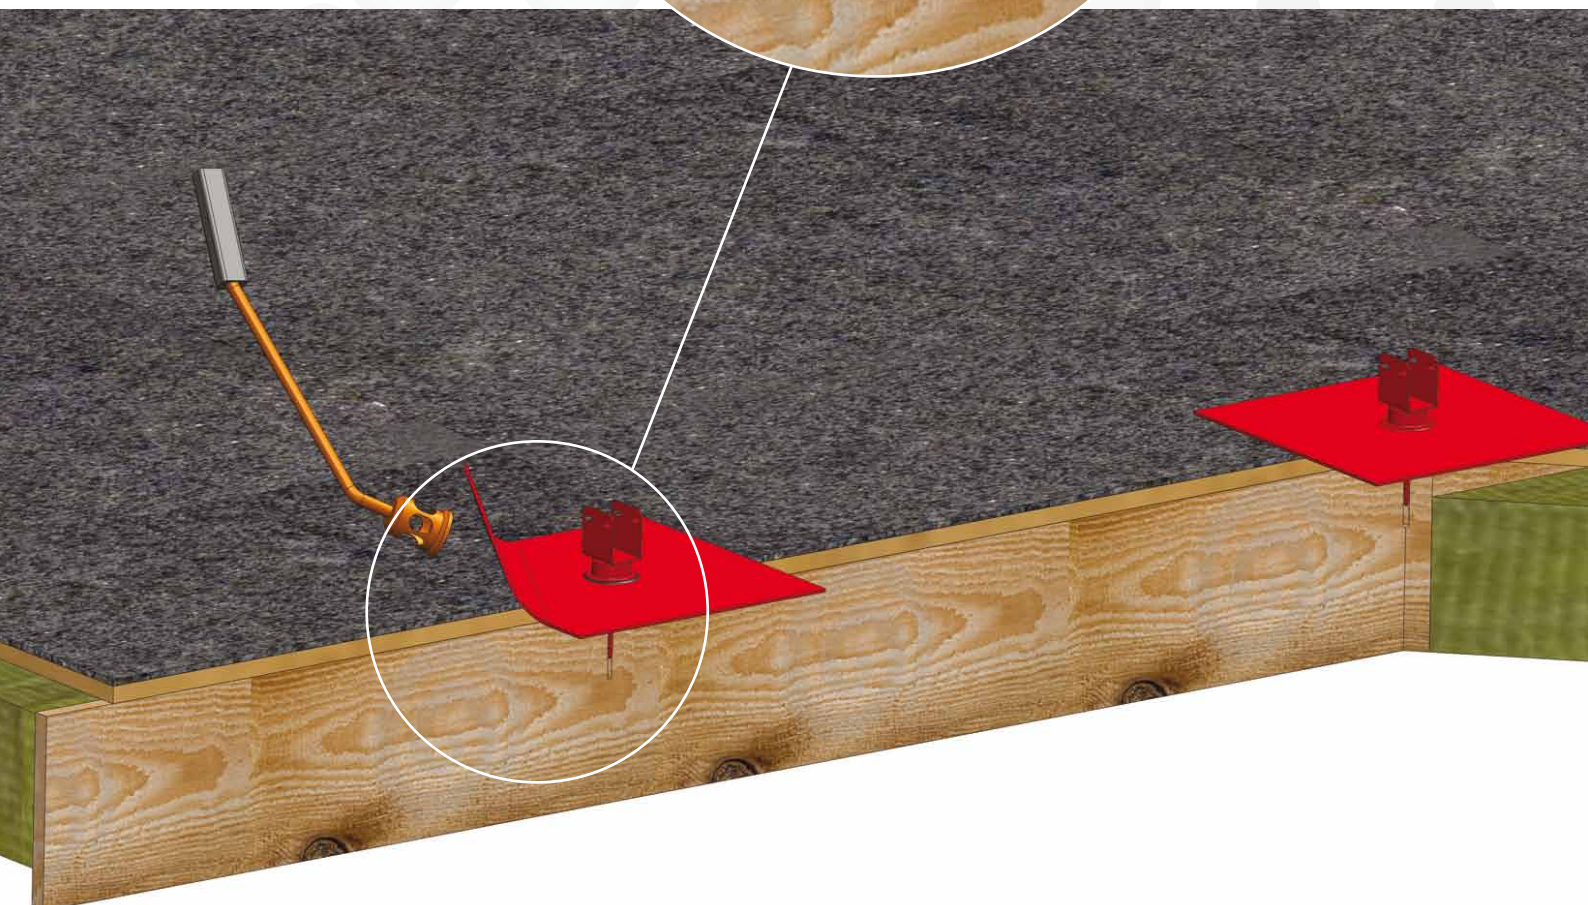

This installation instruction is made available by JUAL A/S